



Wood Shakes Instructions Supplement

STEP 1

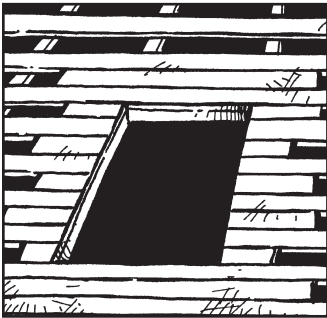

Block in around the rough opening approximately 12" to 18" as illustrated.

STEP 2

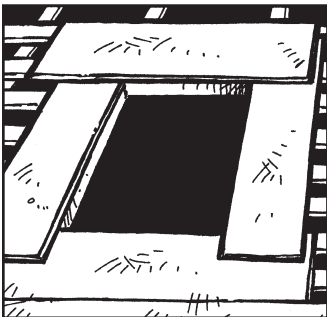


Lay down a base layer of felt paper around the opening.

STEP 3


Position the skylight down over the opening and secure to the roof with anchor brackets. The Ultraseal flange should lay over the course of shakes along the lower edge.

STEP 4

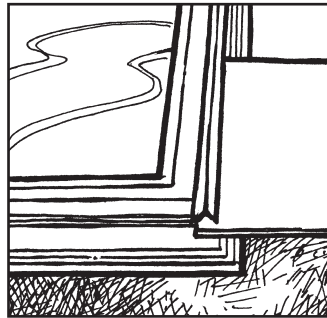


Along the side, the first layer of felt, which lies over the last course of shakes, is run under the L gasket. The first shake on the side is also positioned under the L gasket.

STEP 5

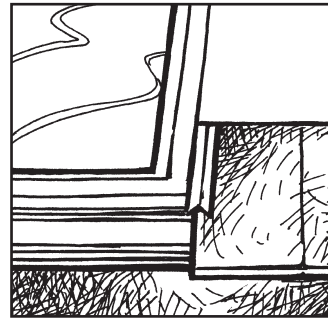

Subsequent layers of felt paper and wood shakes lie over the L gasket.

STEP 6

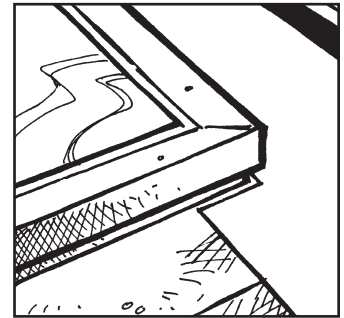

At the top, felt and shakes are placed over the L gasket. Continue to apply shakes up the roof.

